


DIAGNOSTIC START-UP/FINISH

HINT:

- Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.
- After the power switch is ON (ACC), check that the map is displayed before starting the diagnostic mode. Otherwise, some items cannot be checked.

1. There are 2 methods to start diagnostic mode. Start the mode by using one of them.

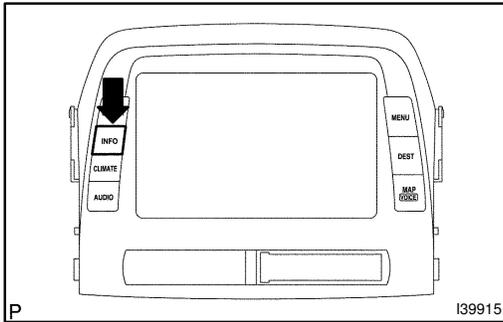


P

I39915

2. Method 1

- Start the HV system.
- While pressing and holding "INFO" switch, operate light control switch, OFF → TAIL → OFF → TAIL → OFF → TAIL → OFF.
- The diagnostic mode starts and the service check screen ("System Check Mode") will be displayed. Service inspection starts automatically and the result will be displayed.

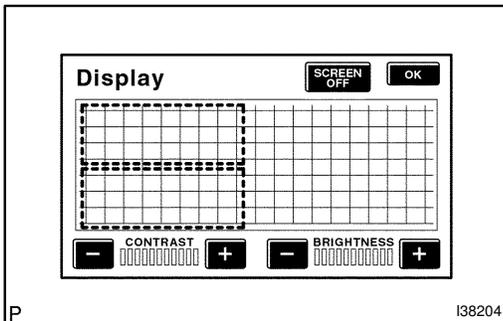


P

I38204

3. Method 2

- Start the HV system.
- Switch to the "Display Check" screen.
- From the display adjustment screen, touch the corners of the screen in the following order: upper left → lower left → upper left → lower left → upper left → lower left.
- The diagnostic mode starts and "Service Check" screen will be displayed. Service inspection starts automatically and the result will be displayed.

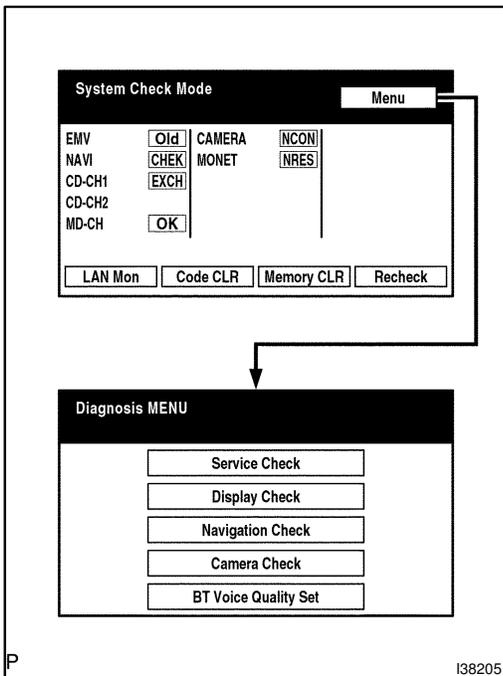

P

I38205

4. Diagnosis MENU

- Diagnostic screen will be displayed by pressing the menu switch on the service check screen.

- 5. There are 2 methods to exit. Use one of them.**
- (a) Turn the power switch off.
 - (b) Press the "DISPLAY" switch for 3 seconds.